


Norstar CICS/MICS Programming Instructions

Changing the Name of a Telephone

(Performing "System" Programming will make the change for all Telephone Sets.)

Programming must be performed on a M7310 or T7316 Telephone Set, Layout as follows:

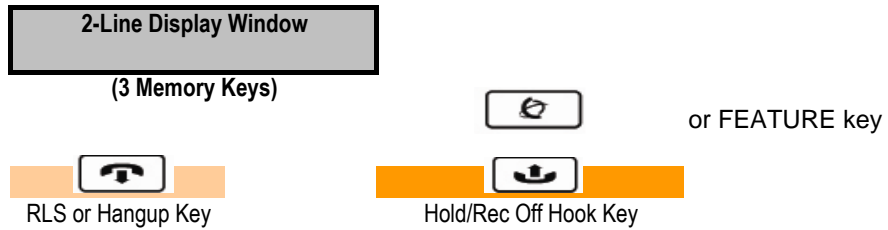

Norstar Programming Overlay goes over top 4 programmable keys on telephone set, as follows:

(If customer don't have overlay, following is what the keys will be when they enter programming below:)

(Key should be Line 1) Heading Show
(Key should be Line 2) Back Next

Press 

Enter from Key Pad **266344

Enter Password from Key Pad 23646

Display Window Shows: Terminals & Sets Press Show
 Show Set: ___ _ _ Enter the 2 or 3-digit extension number you want to change the name
 Set: 221 Press Show + Next + Next
 Name: Enter Name by using key pad - use # key to space (can enter up to 7 characters)
After Entering Name, Press Next

Press  To end.