


Norstar 3x8 Programming Instructions
Changing Time & Date
 (The Time & Date will be changed on all Telephones.)

Programming must be performed on a M7310 or T7316 Telephone Set, Layout as follows:

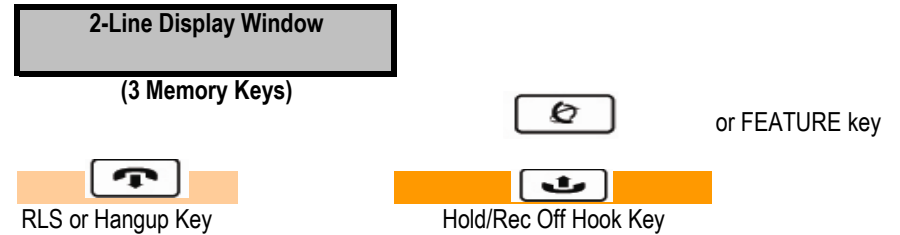

Norstar Programming Overlay goes over 4 programmable keys on telephone set (middle of phone), as follows:
 (If customer don't have overlay, following is what the keys will be when they enter programming below:)

(Key should be Line 1) Heading Show


(Key should be Line 2) Back Next

- Press or FEATURE key
- Enter from Key Pad **23646
- Enter Password from Key Pad 23646 or ADMIN
- System Speed Dial Appears in Display Window Press Next
- Names Appears in Display Window Press Next
- Time & Date Appears in Display Window Press Show Display Window shows Time

To Change Time:

Press	Change	Memory Key under Display Window
Enter	2- Digit Hour	Such as 01:
Press	Next	Display Window shows Hour
Press	Change	Memory Key under Display Window
Enter	2-Digit Minutes	Such as :05
To switch from PM to AM	Press Change	Until correct

To Change Date:

Press	Next	Display Window show Date	
Press	Change	Memory Key under Display Window	
Enter	2-Digit Year	Such as 08 (for 2008)	
Press	Next	Display Window shows Month	
Press	Change	Memory Key under Display Window	
Enter	2-Digit Month	Such as 01 (for January)	
Press		To end.	